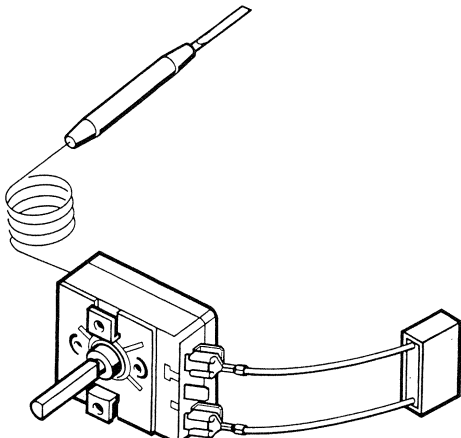
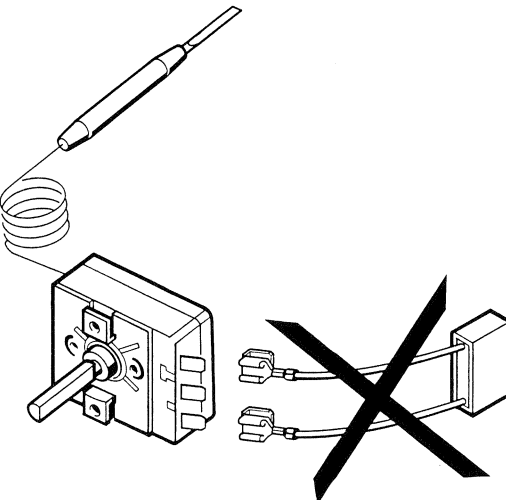
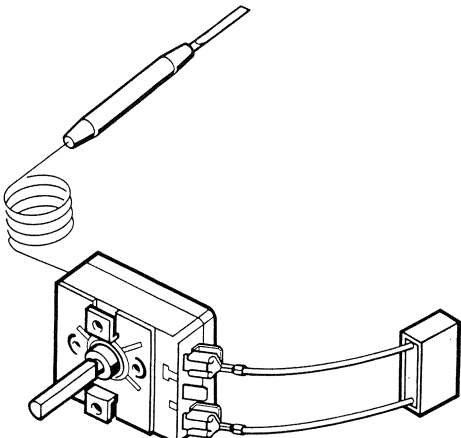
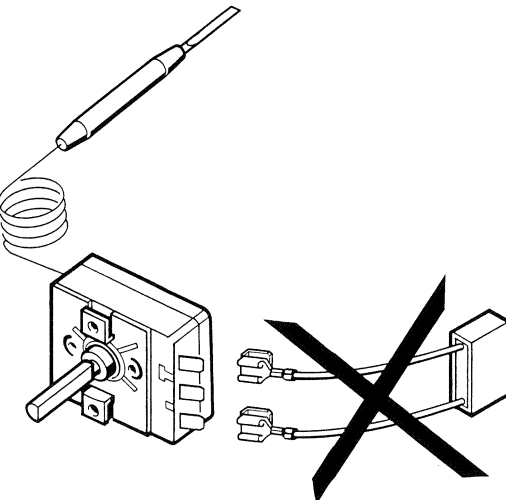


Z... 8/11-3 A/K... Z...18/24-3/-4 A/K... Z.V 20 A...	
KS...-7 E... KSN...-7 E... KNH...-7	
TA 120/122/123 A/E	
KU...-10E KU...-1G	
Z...11/18/24-2 A/K... CL.-100... mini-8/11...	
MVZ 2	
KS...-6E... KSN...-6E...	
Z.B 18/24 A... KB 11/18/24-7 E...	

Bei Anschluß an Fremdgeräte oder Sonderschaltungen für 230 V-Betrieb ist der Kondensator zu entfernen

Z... 8/11-3 A/K... Z...18/24-3/-4 A/K... Z.V 20 A...	
KS...-7 E... KSN...-7 E... KNH...-7	
TA 120/122/123 A/E	
KU...-10E KU...-1G	
Z...11/18/24-2 A/K... CL.-100... mini-8/11...	
MVZ 2	
KS...-6E... KSN...-6E...	
Z.B 18/24 A... KB 11/18/24-7 E...	

Bei Anschluß an Fremdgeräte oder Sonderschaltungen für 230 V-Betrieb ist der Kondensator zu entfernen