
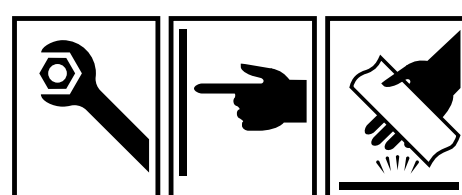
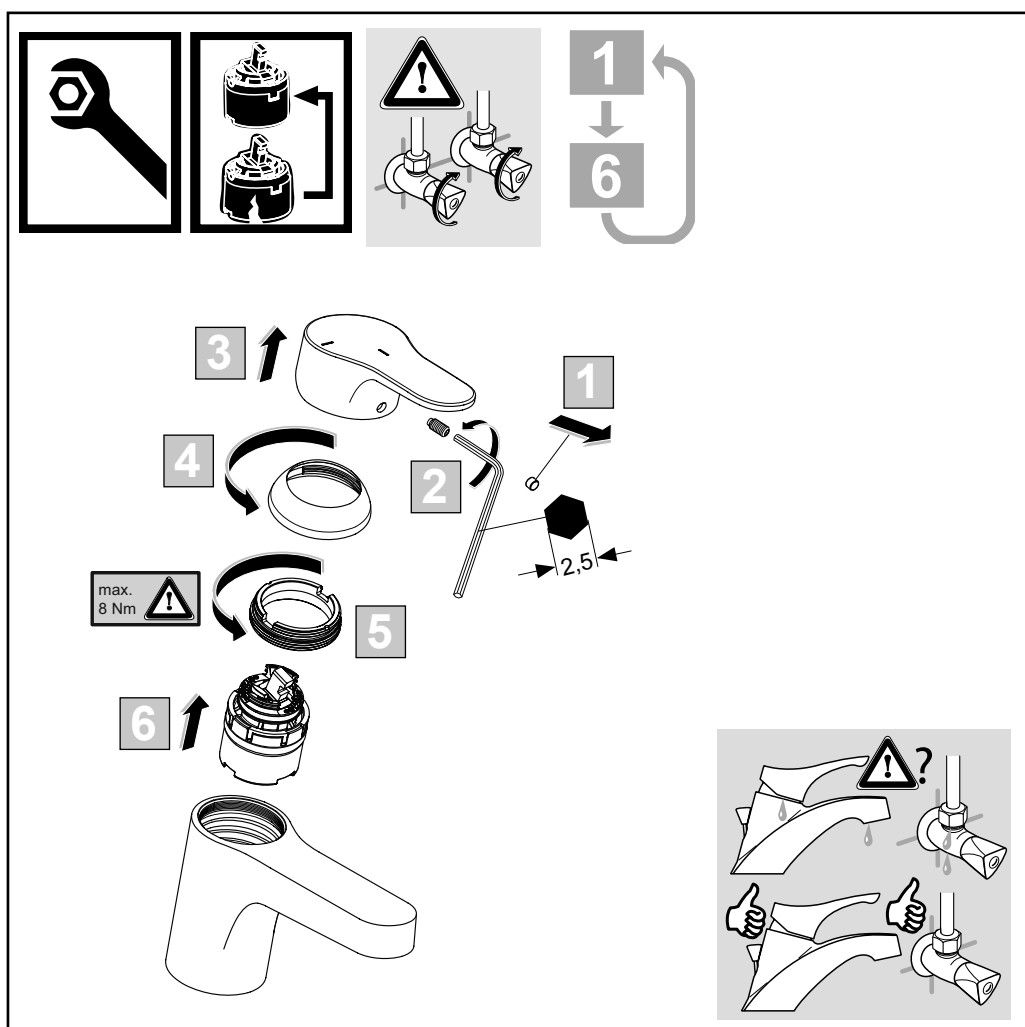



- 1 - B 961853 XX
- 2 - A 963751 NU
- 3 - B 961373 XX
- 4 - B 961374 NU
- 5 - A 861181 NU
- 6 - A 861156 NU
- 7 - B 960754 XX
- 8 - A 964520 NU
- 9 - B 960900 XX
- 10 - B 964550 XX
- 10a - A 962991 XX

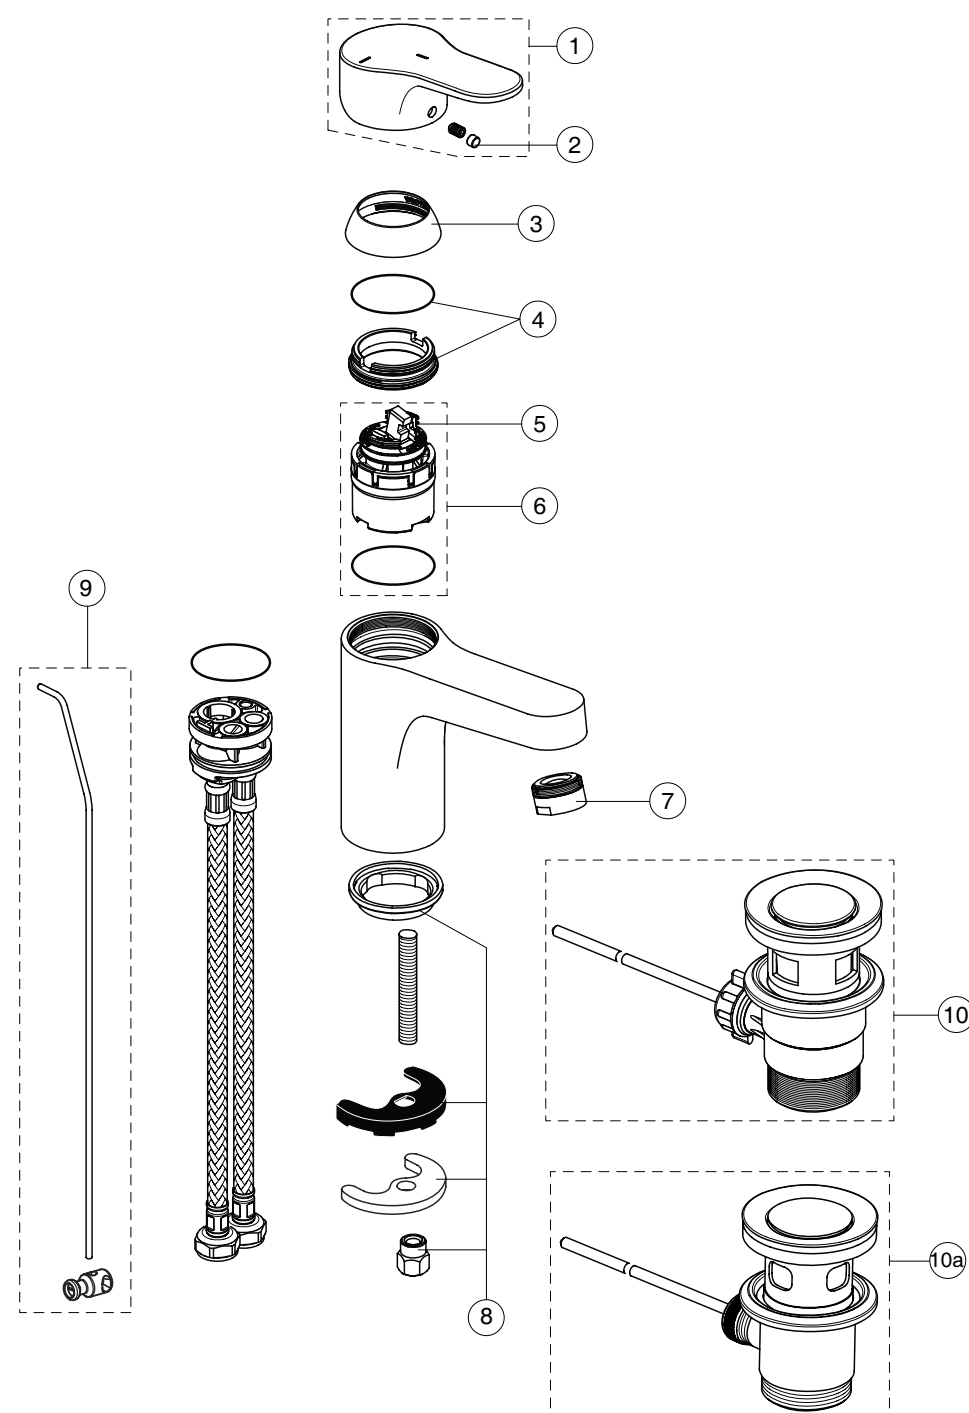



Ideal Standard

08 2022 / B565247

CERABASE

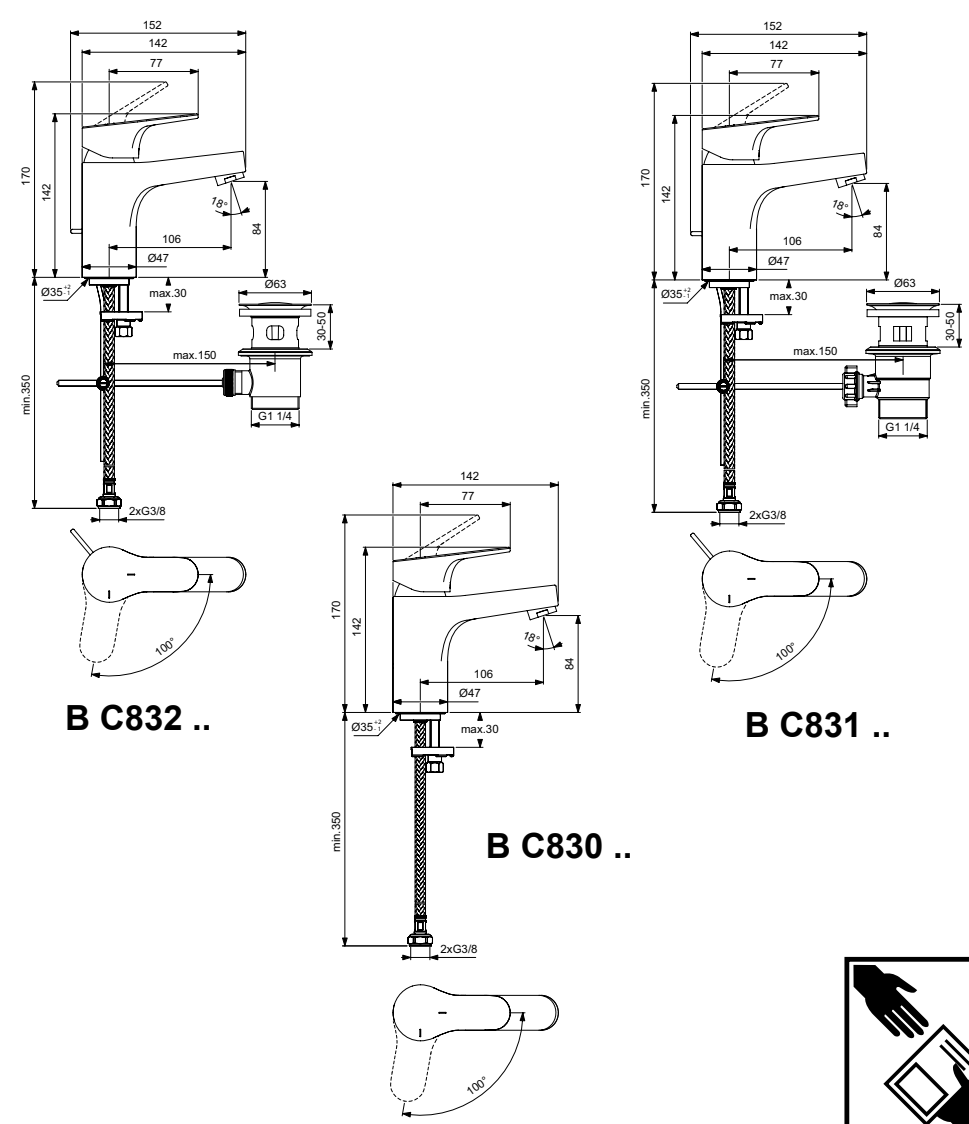

Ideal Standard International NV
Corporate Village – Gent Building
Da Vincilaan 2
1935 Zaventem
Belgium
<http://www.idealstandardinternational.com>

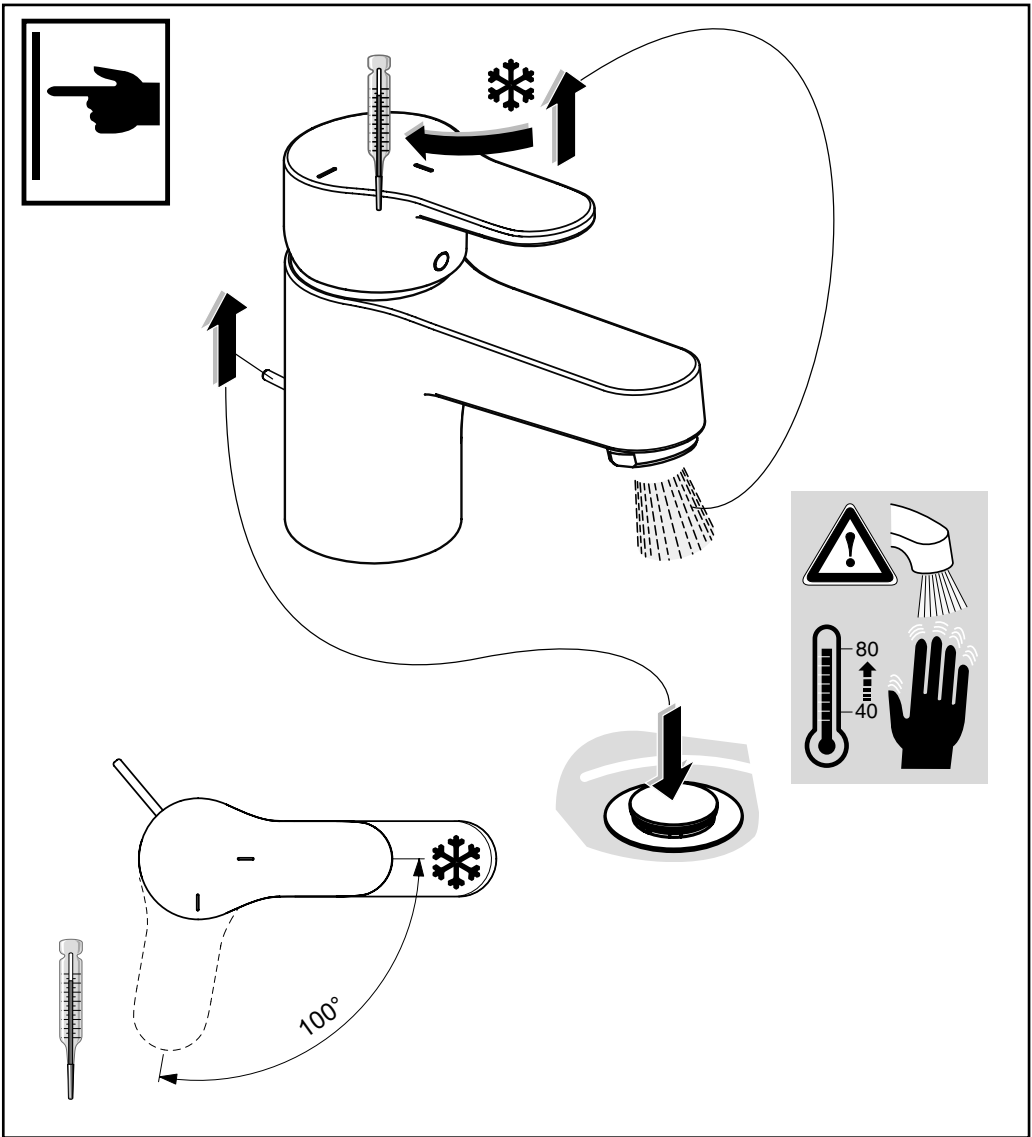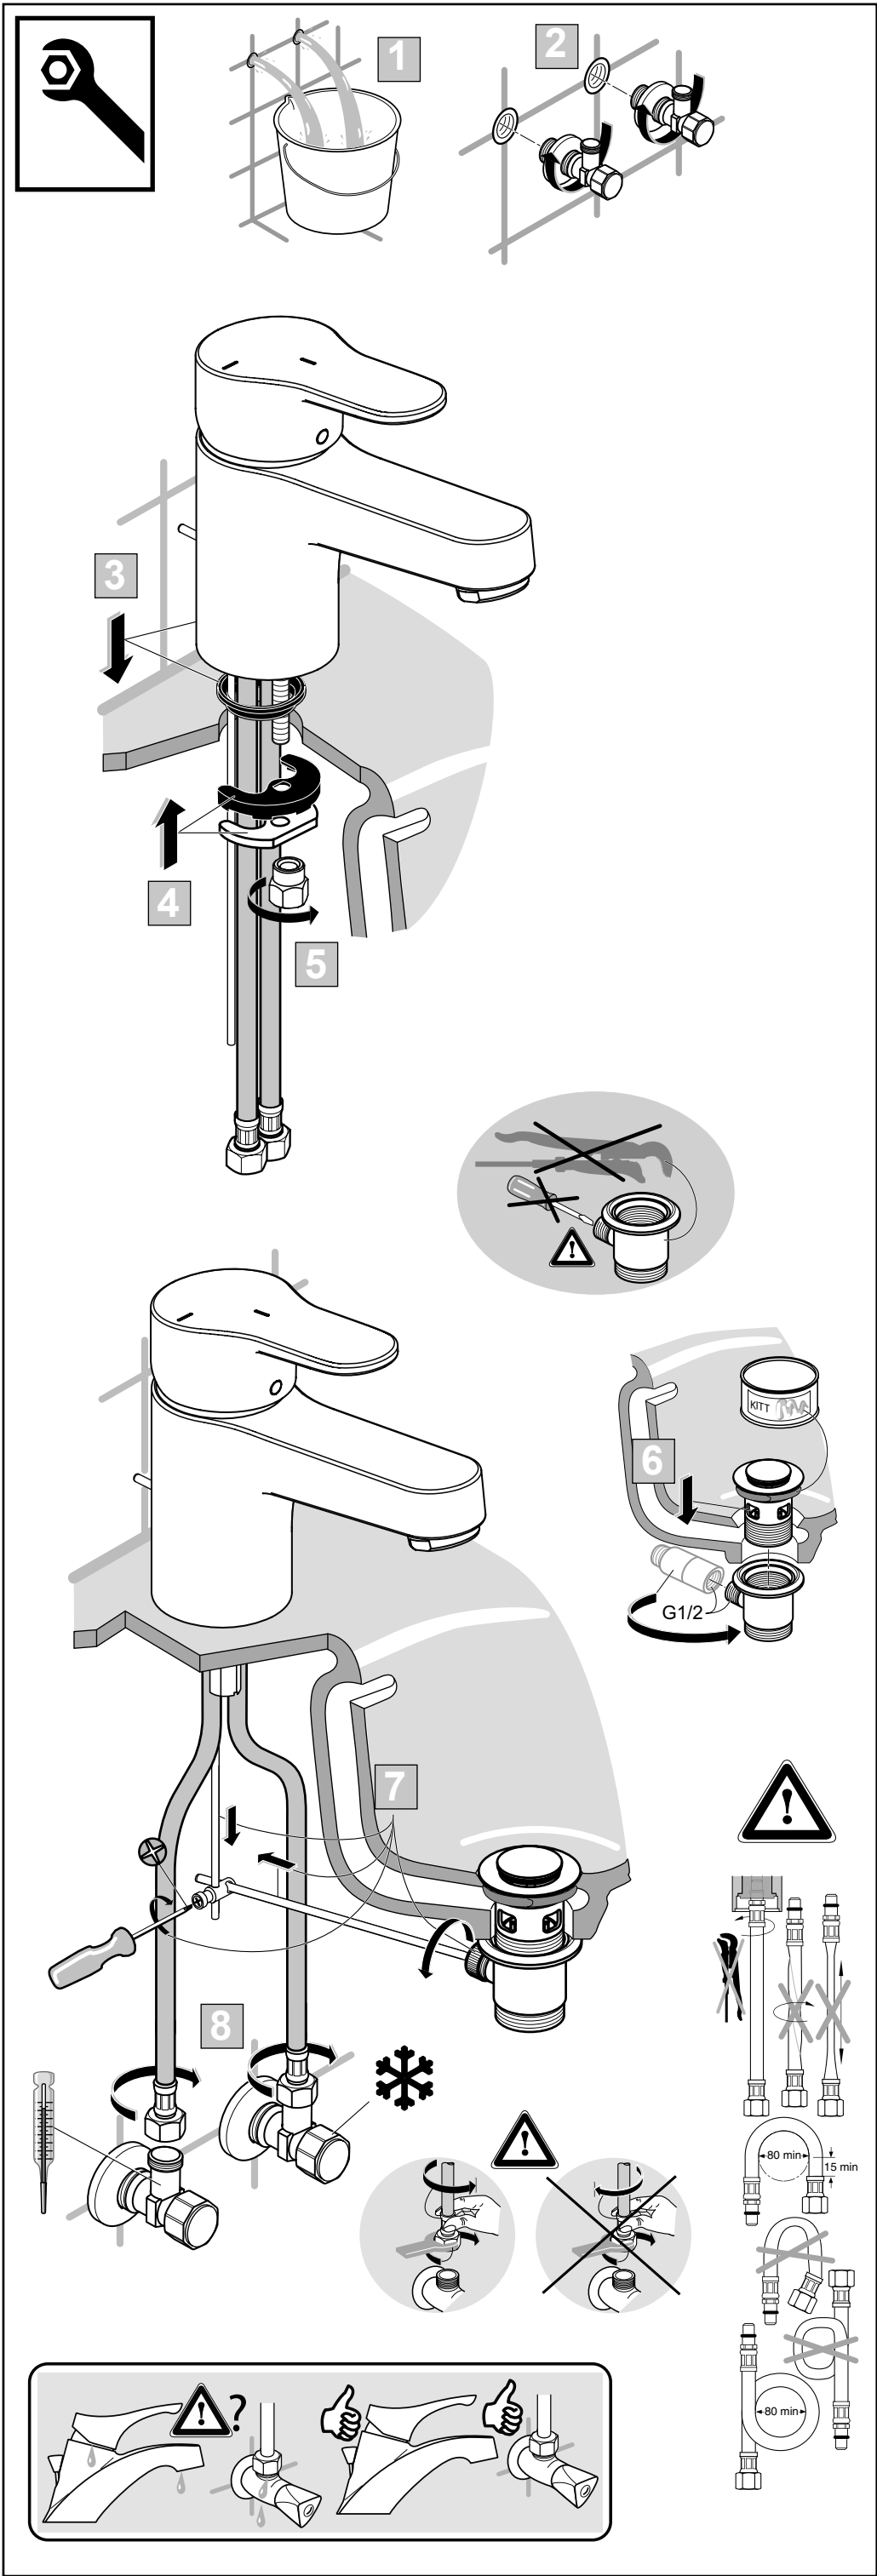

1 Adjusting the temperature stop (T).

2 Adjusting the pressure (P).

	0	1	2	3	4	5
°C	50	49	44	40	35	33
°C	65	63	57	50	44	40
°C	85	83	74	64	56	50

P	bar	T	°C	Q	(3 bar)
MAX. 10	0,5	MAX. 80	65	5	l/min
5		40			