


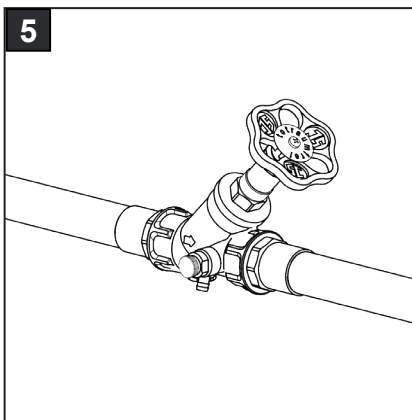
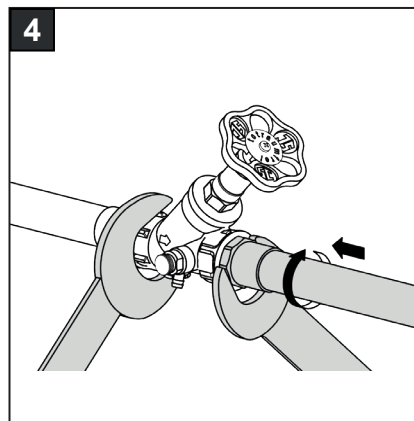
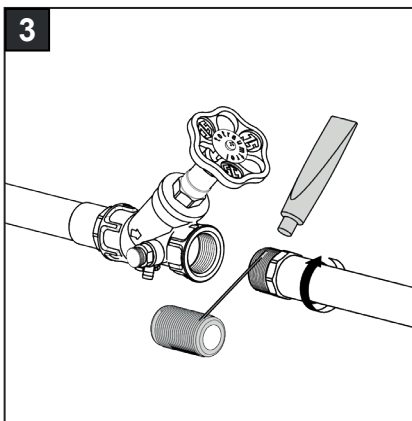
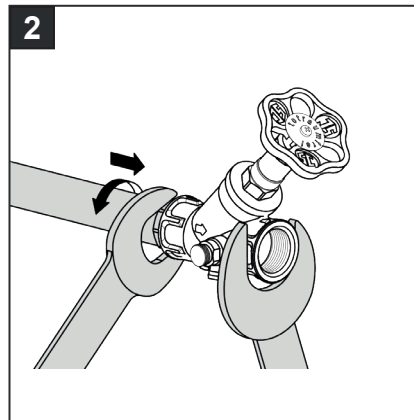
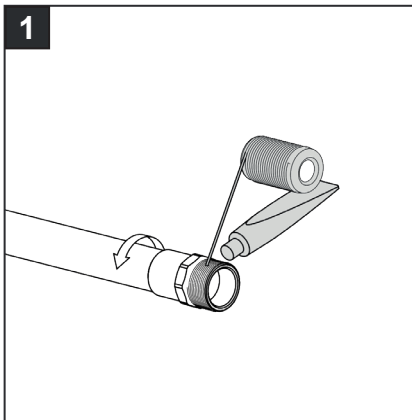
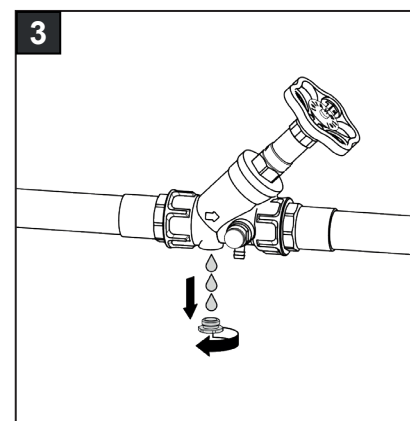


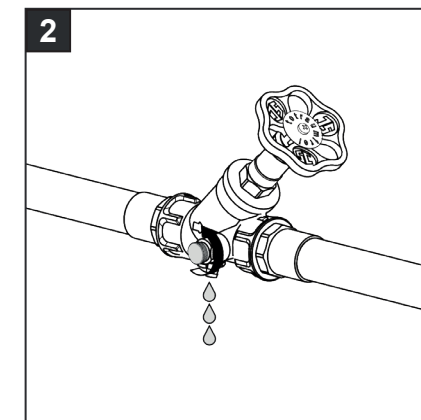

DIN EN 1717

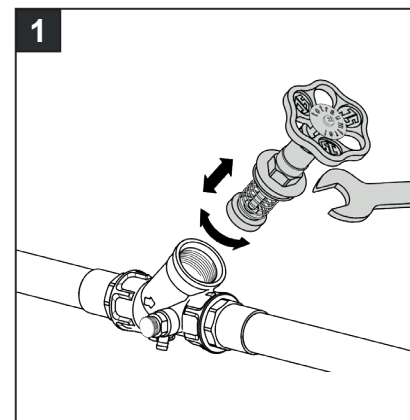


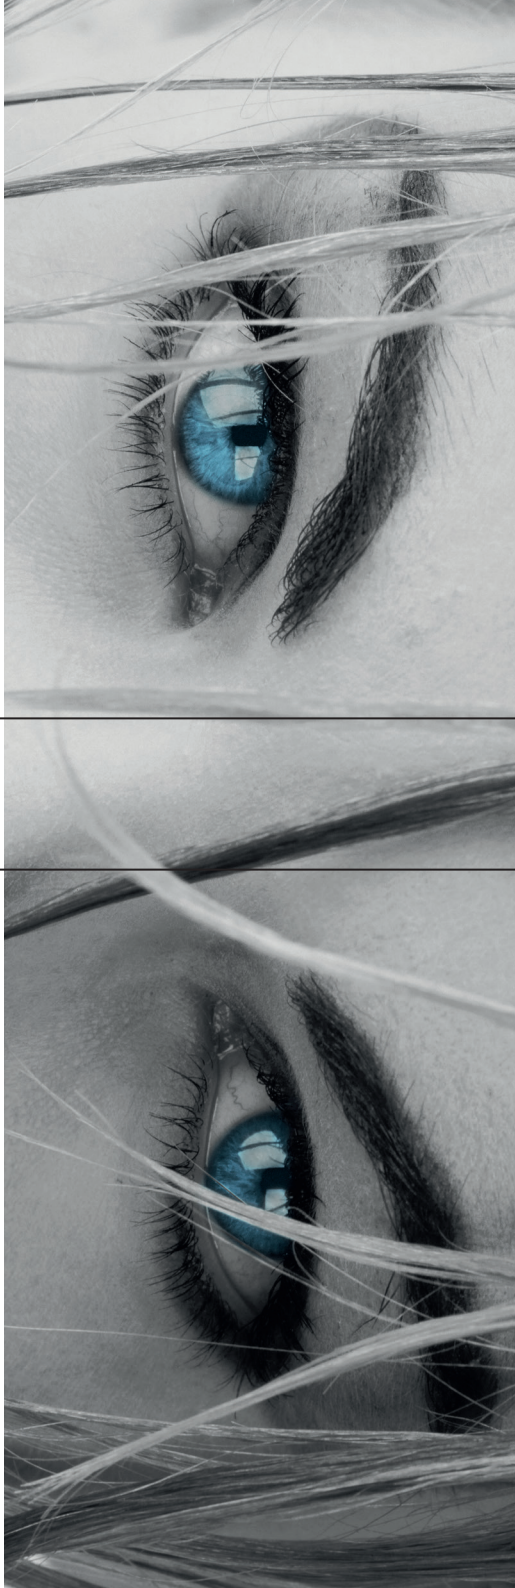


➔ Schlösser Armaturen GmbH & Co. KG
Im Dohm 3
57462 Olpe
GERMANY

✉ www.schloesser-armaturen.de
✉ info@schloesser-armaturen.de




DE Gebrauchsanleitung / Montageanleitung
GB Instructions for use / Assembly instructions
BG Bruksanvisning / Monteringsvejledning
DK Mode d'emploi / Instruccions de montage
FR Gebruiksaanwijzing / Handleiding
NL Bruksanvisning / Montasjeveeliding
NO Instruksja obstuji / Instrukcija montažu
PT Instruções para uso / Manual de instalação
CZ Návod k použití / Montážní návod
HU Használati útmutató / Szerelési útmutató
SV Bruksanvisning / Monteringsanvisning
ES Modo de empleo / Instrucciones de montaje
RU Руководство пользователя /
Инструкция по монтажу
IT Istruzioni per l'uso / Istruzioni per l'uso
SK Montážny návod / Návod na použítie

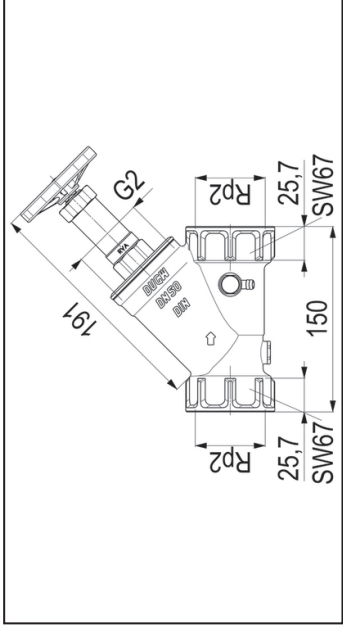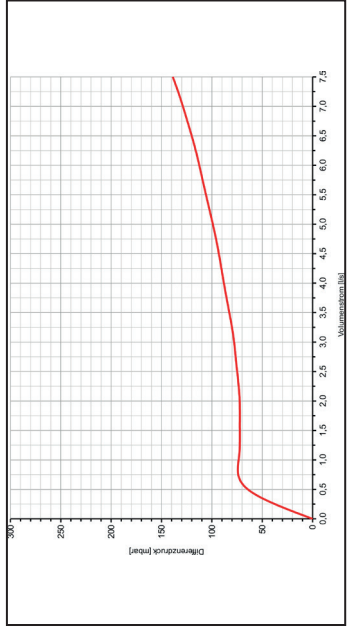

0016305000001

01 0018215000001
02 0018590800001
03 0018360800001
04 0018310800001
05 0018215000004
06 0018195000235

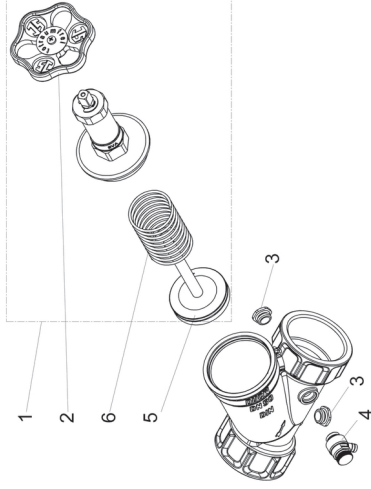

DIN 1988

DIN 3502

DIN EN 1213

bar

°C

5

1

0.5

max. 16

max. 90°

max. 65°

