


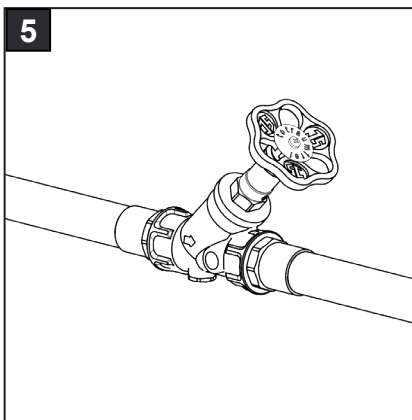
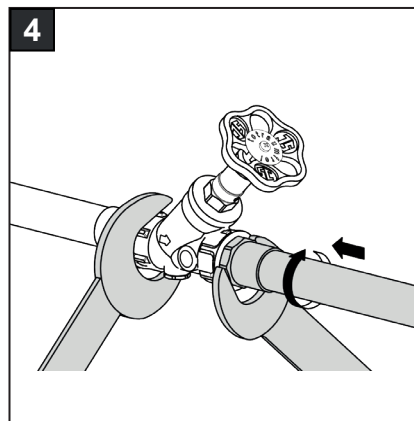
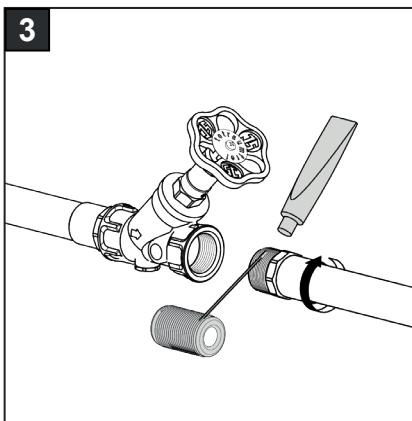
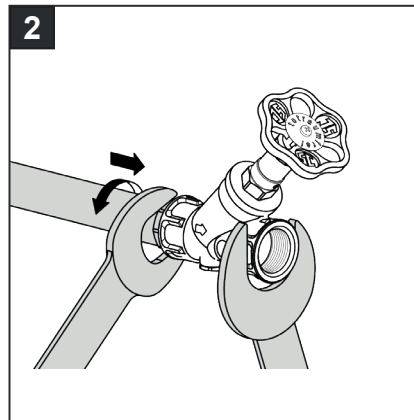
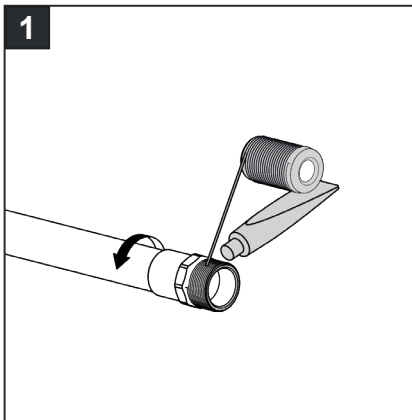


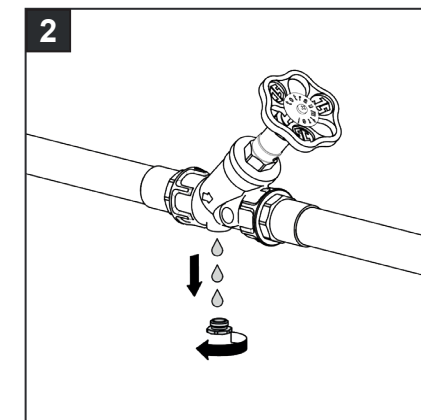



DIN EN 1717

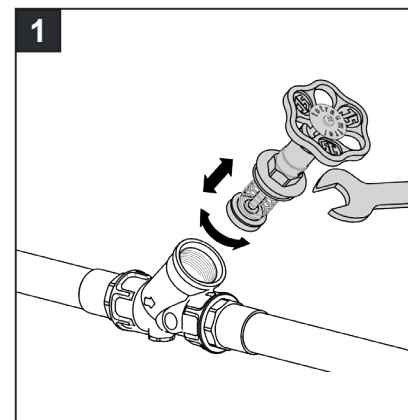

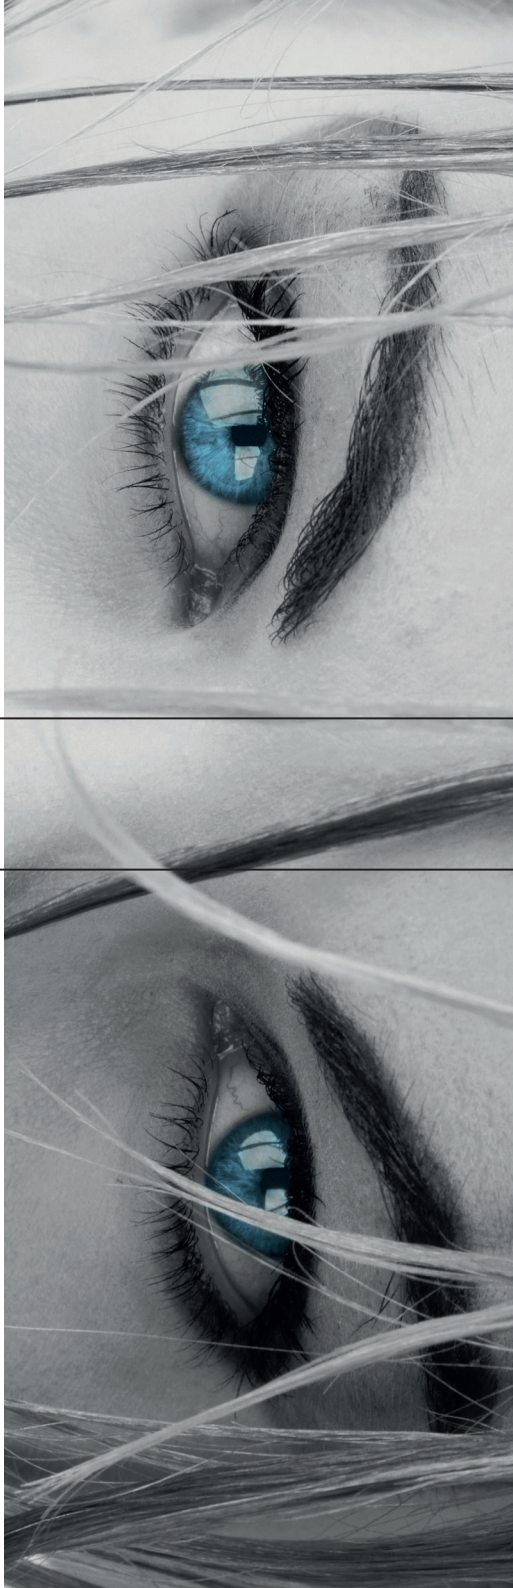

**Schlösser Armaturen GmbH & Co. KG**  
Im Dohm 3  
57462 Olpe  
GERMANY  
[www.schloesser-armaturen.de](http://www.schloesser-armaturen.de)  
[info@schloesser-armaturen.de](mailto:info@schloesser-armaturen.de)

**DE Gebrauchsanleitung / Montageanleitung**  
**GB** Instructions for use / Assembly instructions  
**BG** Brugsanvisning / Monteringsvejledning  
**DK** Mode d'emploi / Instructions de montage  
**FR** Gebruiksaanwijzing / Handleiding  
**NL** Brugsanvisning / Montasjehandleiding  
**NO** Instruksja para uso / Manual de instalación  
**PL** Návod k použití / Montážní návod  
**CZ** Használati útmutató / Szerelési útmutató  
**HU** Bruksanvisning / Monteringsanvisning  
**SV** Modo de empleo / Instrucciones de montaje  
**ES** Руководство по пользованию /  
**RU** Инструкция по монтажу  
**IT** Istruzioni per l'uso / Istruzioni per l'uso  
**SK** Montážny návod / Návod na použití

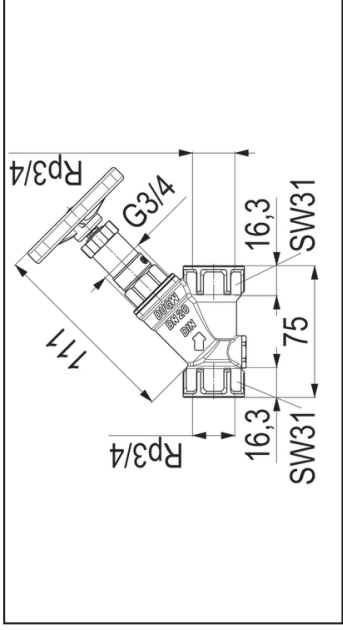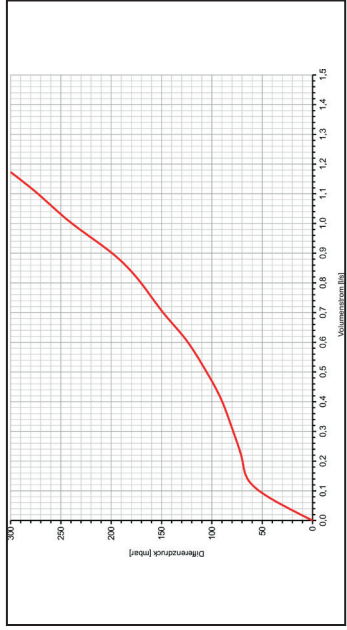

**0016252000001**

**DIN 1988**

**DIN 3502**

**DIN EN 1213**

**bar**

**°C**

**max. 16**

**max. 90°**

**0,5**

**65°**

- 01 0018212000001
- 02 0018590700002
- 03 0018360800001
- 04 0018212000004
- 05 00181920000235

