

Kitchen Shower Taps Window

General
Instruction
Villeroy & Boch





DE	Montageanleitung	AR	دليل التركيب	HU	Szerelési útmutató	PT	Instruções de montagem
EN	Installation instructions	BG	Ръководство за монтаж	ID	Petunjuk pemasangan	RO	Manual de montaj
ES	Instrucciones de montaje	CS	Návod k montáži	JA	取付説明書	SK	Návod na montáž
FR	Instructions de montage	DA	Monteringsvejledning	KO	설치 가이드	SL	Navodila za montažo
IT	Istruzioni per il montaggio	ET	Paigaldusjuhend	LT	Montavimo instrukcija	SV	Monteringsanvisning
NL	Montagehandleiding	EL	Οδηγίες τοποθέτησης	LV	Montāžas instrukcija	TH	คู่มือการติดตั้ง
RU	Инструкция по монтажу	FI	Asennusohje	NO	Monteringsanvisning	TR	Montaj kılavuzu
ZH	安装说明	HR	Uputa za montažu	PL	Instrukcja montażu	UK	Інструкція з монтажу





Villeroy & Boch
1748

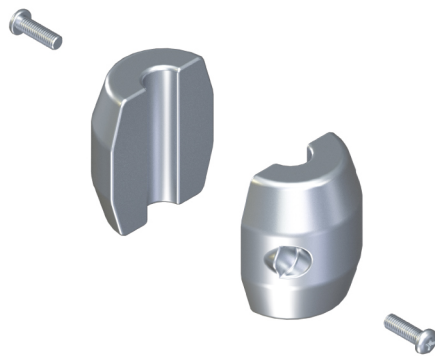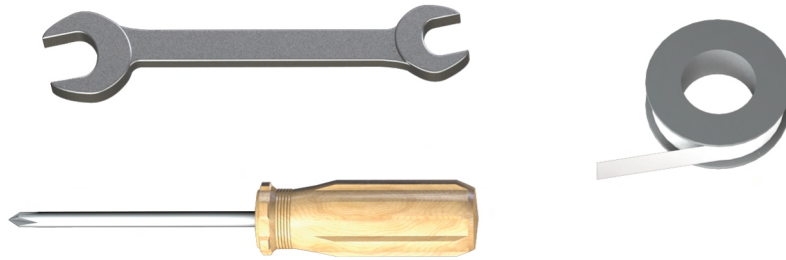


i


	mm	in
DN 6	R > 25	R > 0 ⁶³ / ₆₄
DN 8	R > 30	R > 1 ³ / ₁₆
DN 10	R > 35	R > 1 ³ / ₈


< 70 °C < 158 °F
 ~ 60 °C ~ 140 °F


100 kPa (1 bar) - 500 kPa (5 bar)
 < 1000 kPa (10 bar)

~ 10 °C
 ~ 50 °F

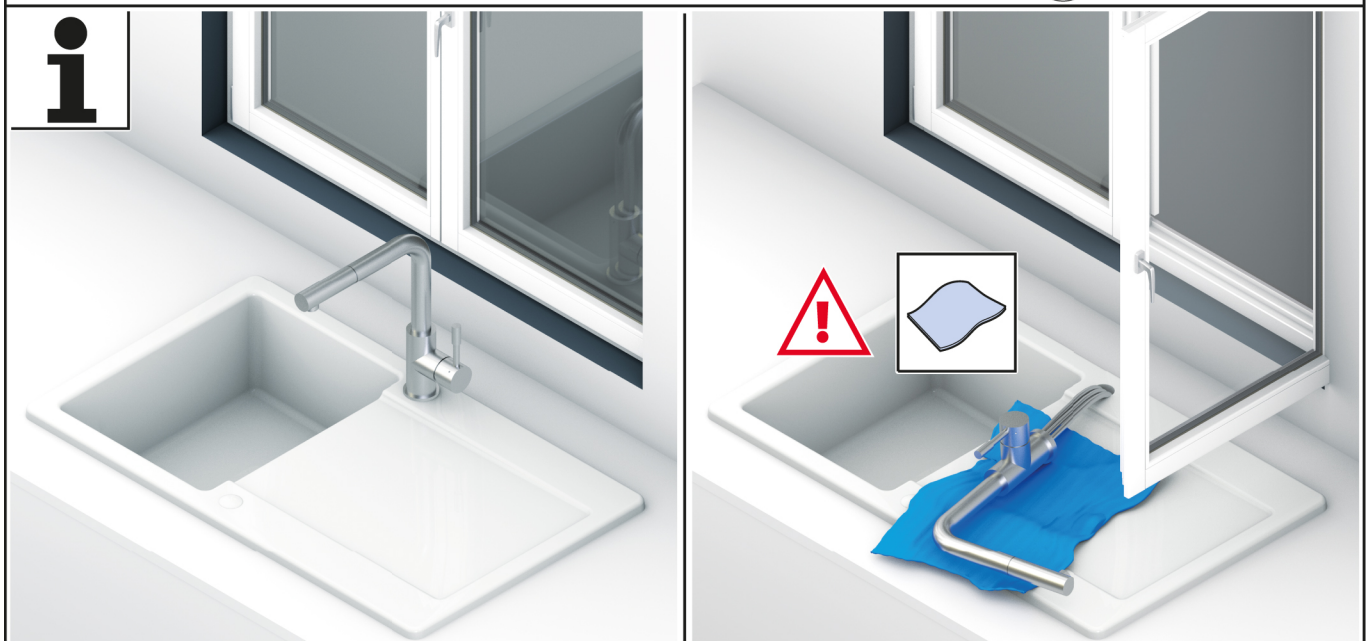

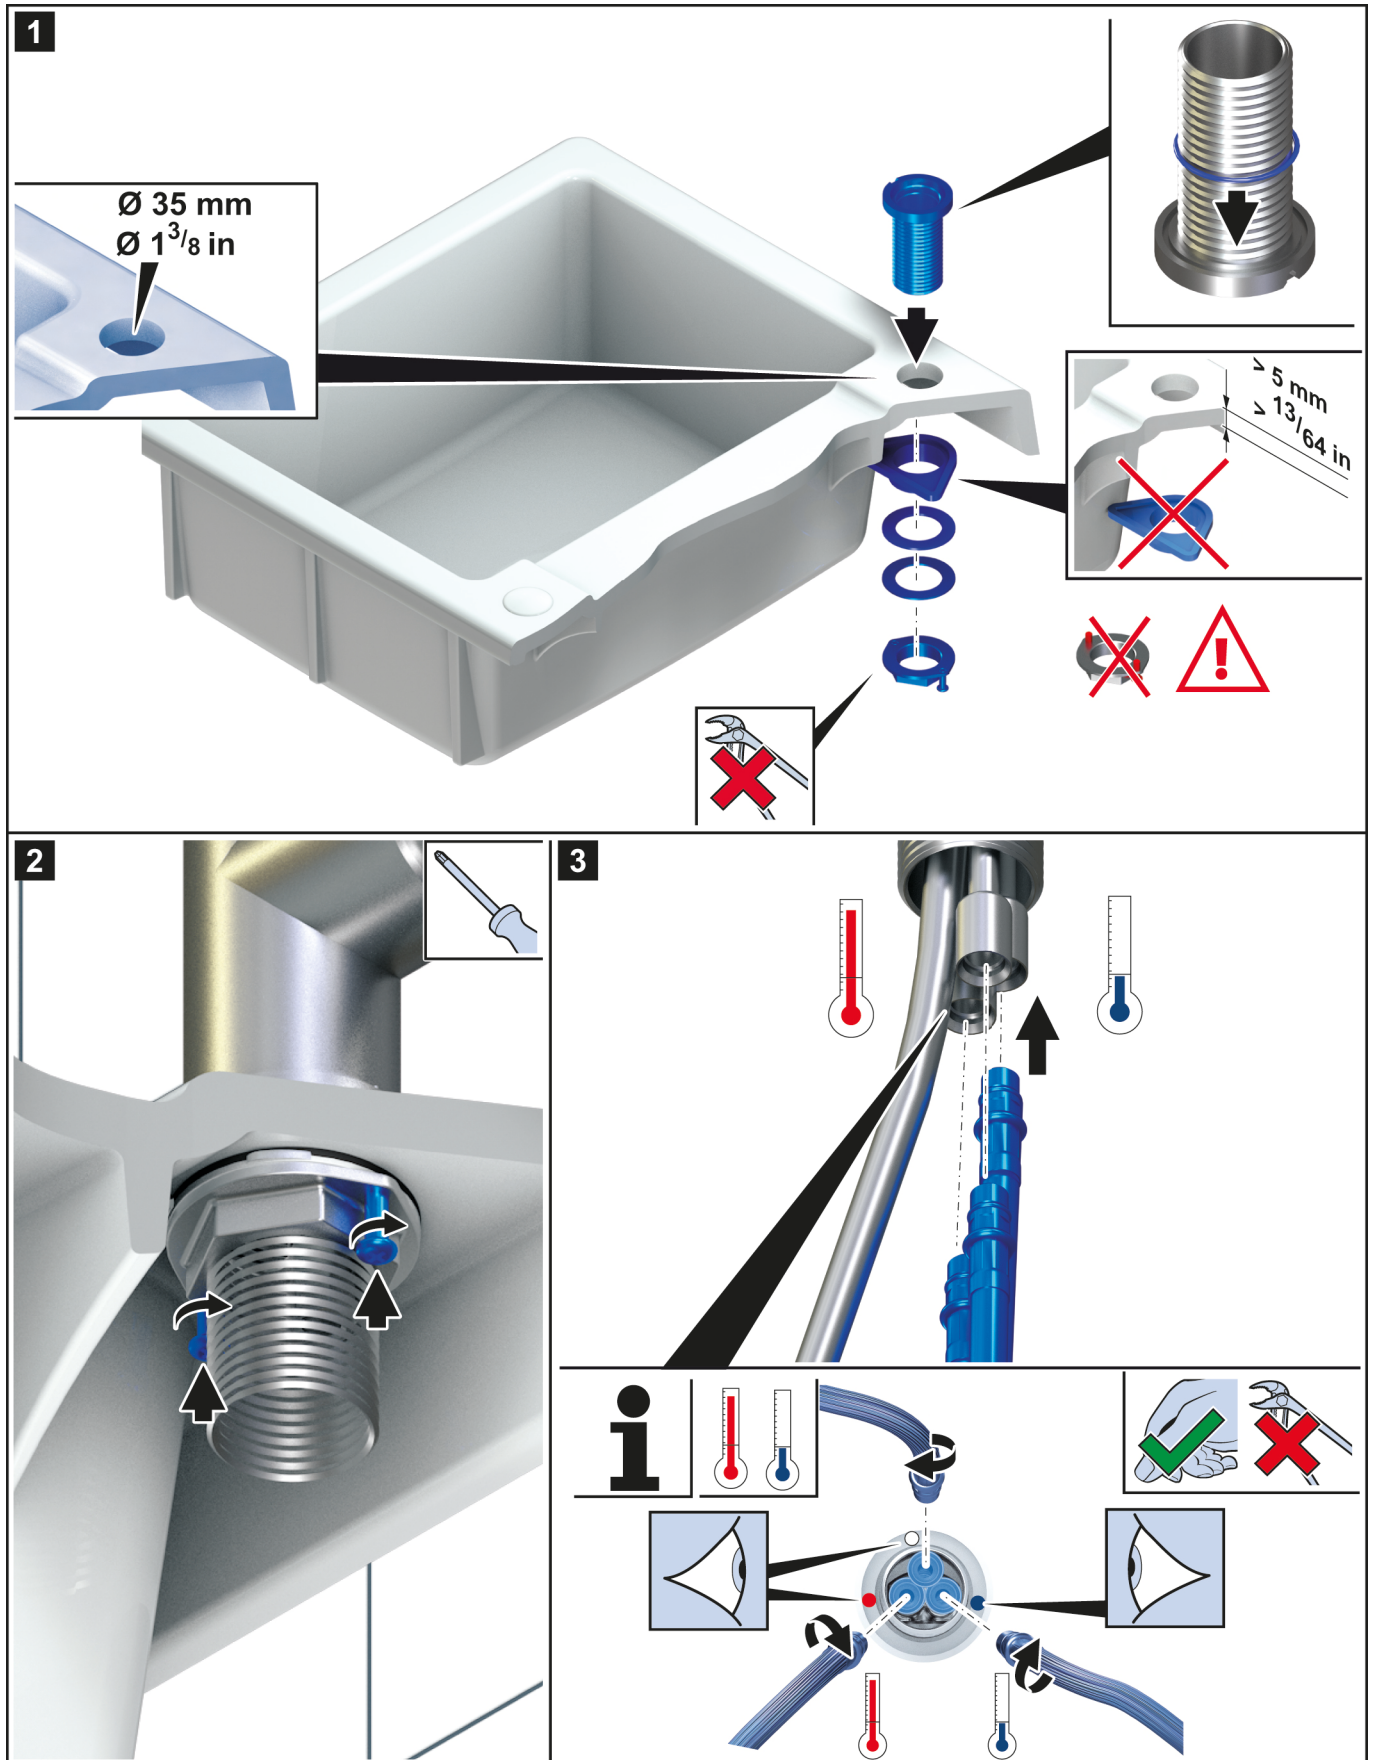

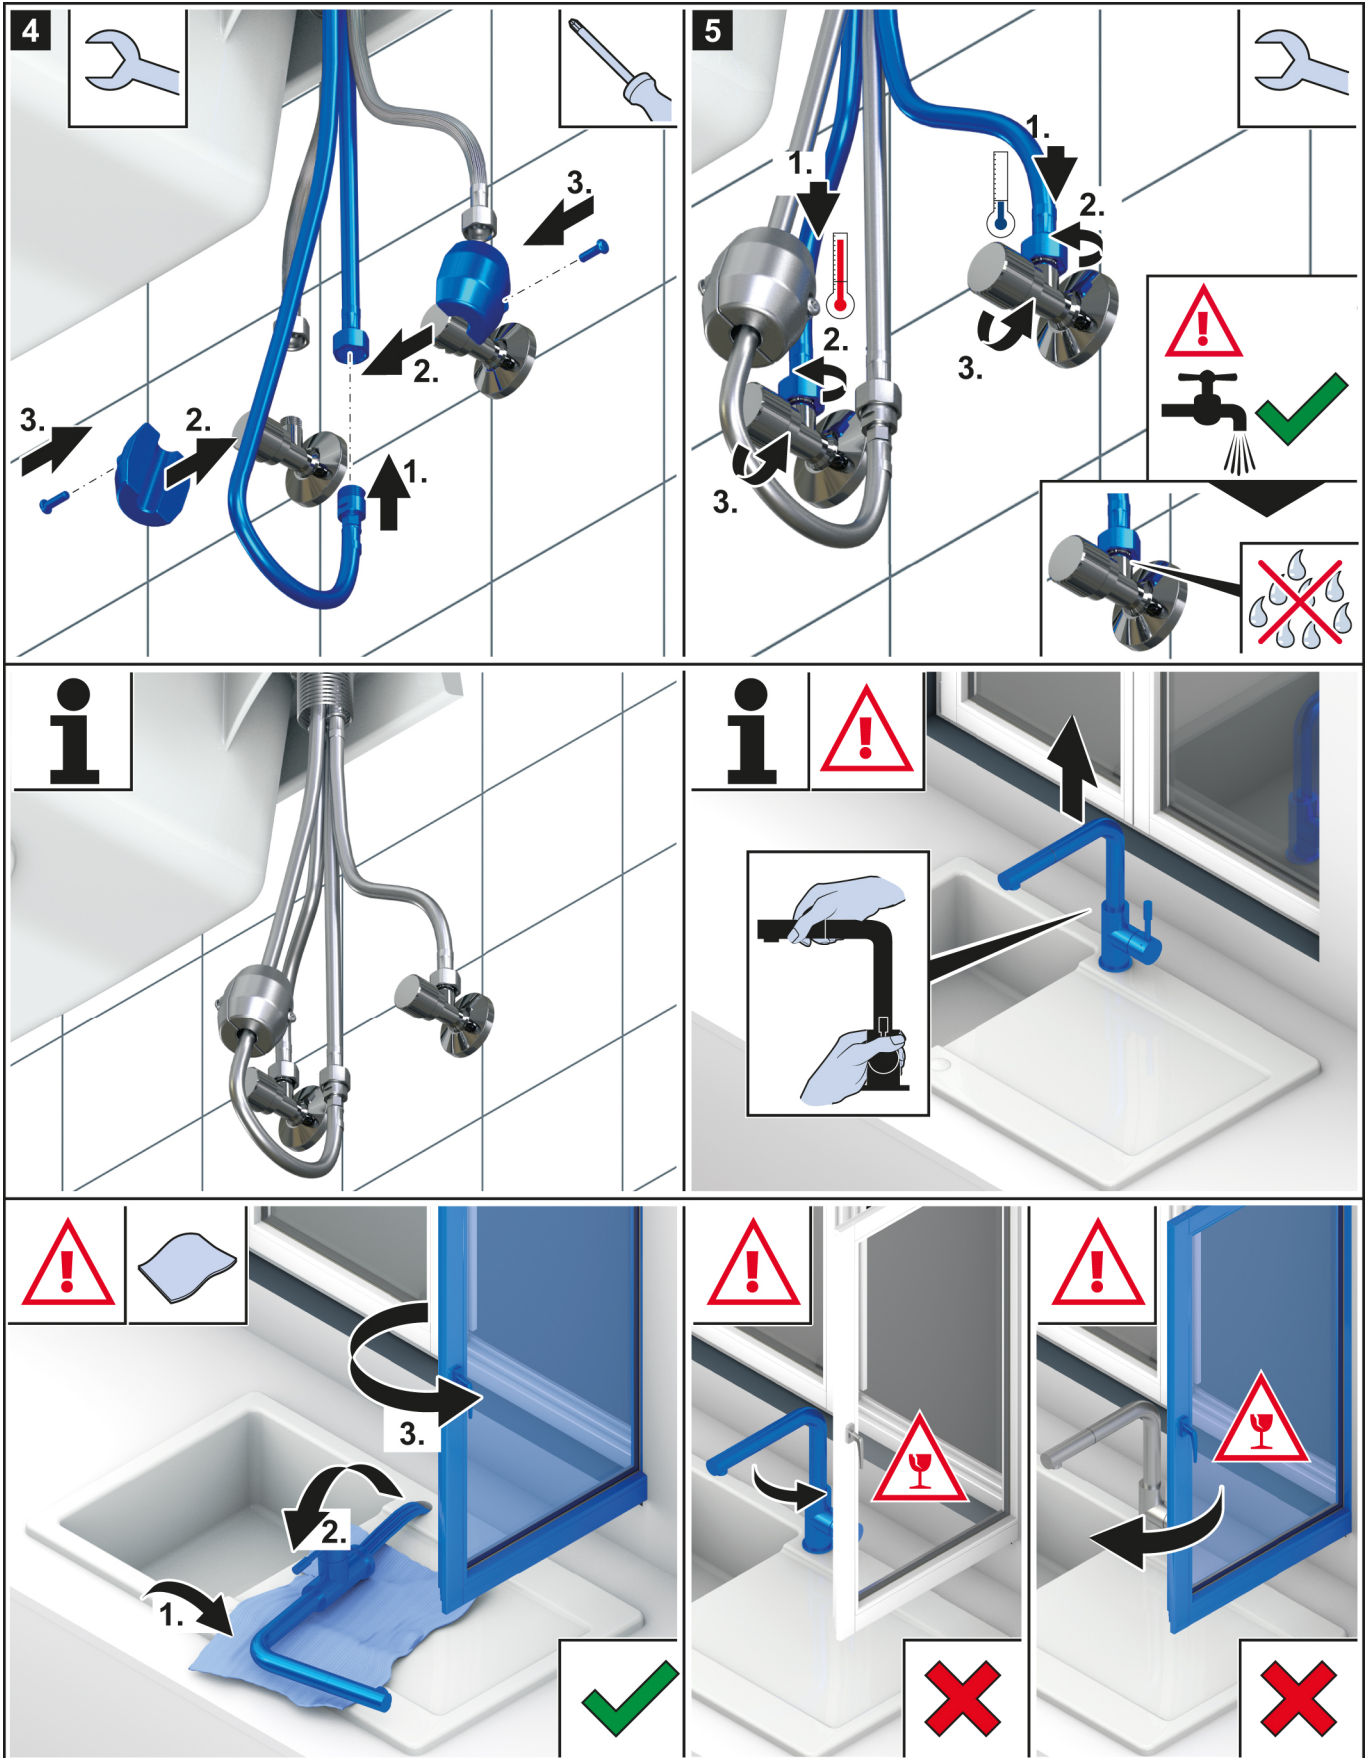

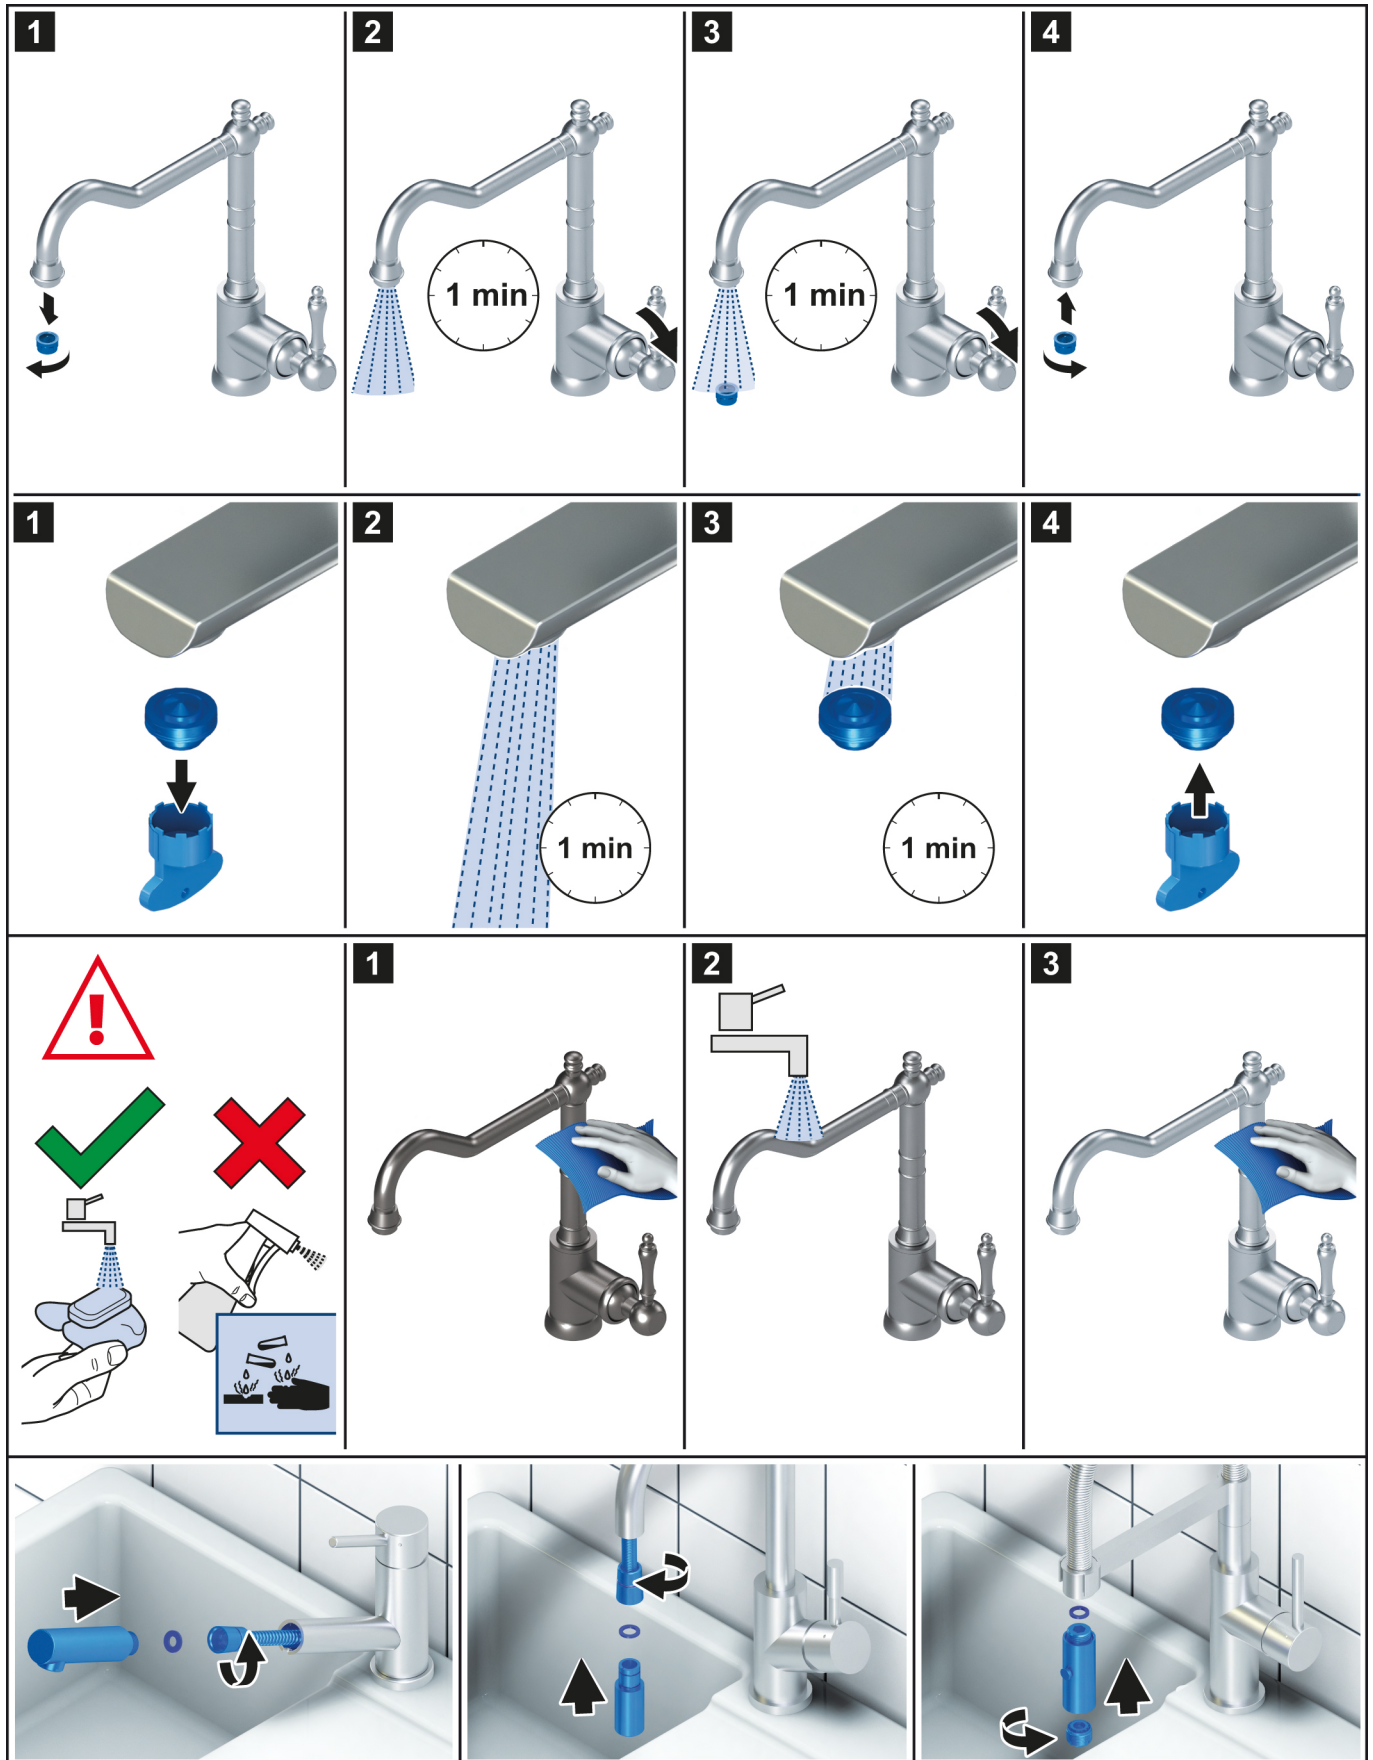

VILLEROY & BOCH

GERMANY

*Villeroy & Boch AG
Bathroom and Wellness Division
Headquarters
66693 Mettlach
Germany*

Tel: +49 (0) 68 64 / 81 0

Fax: +49 (0) 68 64 / 81 1484